

INSTRUCTIONS

Parts

1. (1) Blade
2. (1) Frame
3. (1) Handle
4. (2) Wheels
5. (3) 1" x 5/16" carriage bolts
6. (3) 5/16" self-locking nuts
7. (2) 1 1/2" x 1/2" shoulder bolts
8. (2) 3/8" self-locking nuts
9. (2) 2" x 5/16" clevis pins
10. (4) 1/4" flat washers
11. (2) Split rings
12. (4) 5/16" flat washers

Tools

1. 9/16" wrench
2. 1/2" wrench
3. Pliers or small adjustable wrench

PLEASE NOTE: Self-locking nuts require more pressure to install than regular nuts. Be sure to tighten each one completely to ensure proper performance of your Snowcaster.

Assembly

Step 1. Attach blade to frame

Insert three (3) 1" x 5/16" carriage bolts through face of blade into frame. Be sure to align square portion of bolt head with square holes in blade. Tighten three (3) 5/16" self-locking nuts thoroughly so the smooth heads of bolts are embedded into face of blade.

Step 2. Attach handle to frame

Insert two (2) 2" x 5/16" clevis pins and two (2) 1/4" flat washers through outside of frame and into handle. Secure with two (2) split rings and two (2) 1/4" flat washers.

Step 3. Attach wheels to frame

Attach wheels to the plastic frame only, as shown in the inset picture. Insert two (2) 1 1/2" x 1/2" shoulder bolts through outside of each wheel and into frame with a 5/16" flat washer on each side of frame. Attach two (2) 3/8" self-locking nuts and tighten thoroughly.

